


# Sensor switch

## DS1-T Series



### Dimensions

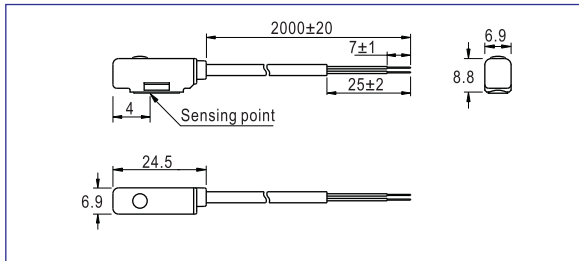

### Specification

Item/Type	DS1-T	DS1-TN	DS1-TP
Switch logic	Transistor without contact, Normally opened type		
Switch type	Two lines type	NPN type	PNP type
Operating voltage(V)	10~28V DC	5~30V DC	
Max. Switching current(mA)	50	200	
Switching rating(W)	Max. 1.4		Max. 6
Current consumption	12(40)uA Max. @24V	15mA Max. @24V	
Voltage drop	2.65V Max. @50mA DC	0.5V Max. @200mA DC	
Cable	Φ 3.3,2C Black oil resistant PVC	Φ 3.3,3C Black oil resistant PVC	
Indicator	Red LED		
Leakage current	20(90)uA Max. @28V	0.01mA Max.	
Sensitivity(Gauss)	25~700	55~65	
Max. Frequency(Hz)	1000		
Shock(m/s <sup>2</sup> )	500		
Vibration(m/s <sup>2</sup> )	90		
Temperature range(°C)	-10~70		
Enclosure classification	IP67(NEMA6)		
Protection circuit	Power reverse polarity, surge suppression		

### Ordering code

**DS1 T N 020 A 32**

- Number of sensor switch**
  - DS1: Sensor switch
- Specification of sensor switch**

Specification	Product Series
T: T type	TWG
- Model of sensor switch**

Blank: two-line /normally opened
N: three-line NPN with no contact (current flows in)/ normally opened
P: three-line PNP with no contact (current flows out)/ normally opened
- Bore size**

32: Φ32mm
40: Φ40mm
50: Φ50mm
- Cylinder Barrel material**

A: Aluminum alloy
-------------------
- Connecting way** ①

C08: M8 quick joint, length of wire is 150mm
C12: M12 quick joint, length of wire is 150mm
020: length of wire is 2m
030: length of wire is 3m
050: length of wire is 5m
100: length of wire is 10m

① Note: The quick joint that is attached at the end of wire is three-needle-male joint-linear-rotary screw thread type. The female joint plug has to be ordered additionally. Please refer to P420 for the specific data.

### Mounting

Installation example	Installation method
	<p>No additional accessories are necessary for the sensor switch of DS1-T, DS1-TN, DS1-TP series. It can be directly fixed onto the cylinder, which is convenient and fast.</p> <ol style="list-style-type: none"> <li>Strap band round the cylinder barrel.</li> <li>Snap the clamping screw into button orifice and adjust it to the proper position.</li> <li>Properly tighten the clamping screw to fix.</li> </ol>



Sensor switch

